


ELAN Control System

ISP and I.ISP driver package


July 6th, 2020

1 AV Processor selection


Note: AV processor should be turn on while configuring it with ELAN and Minimum core module of ELAN should be 8.3 Built 765.0 Rel.

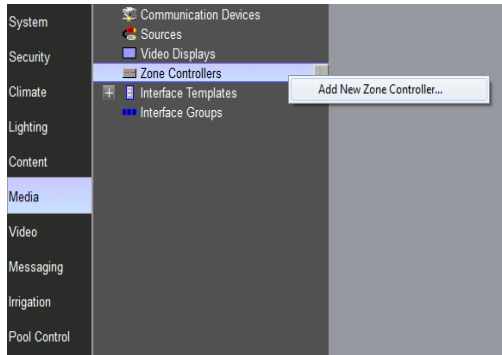


Open ELAN configurator --> Go to Media tab --> Right click on Zone controller --> Click add new zone controller.

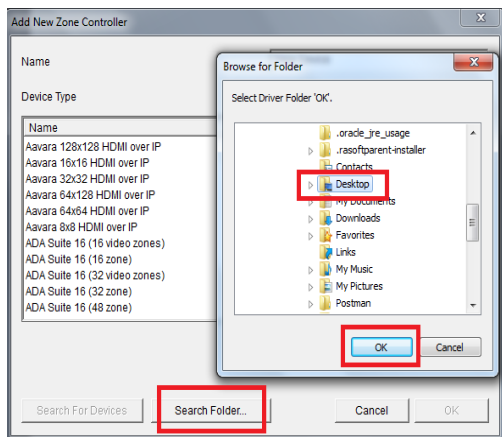

Click on search folder --> Select the folder where you kept the driver file --> Click OK.

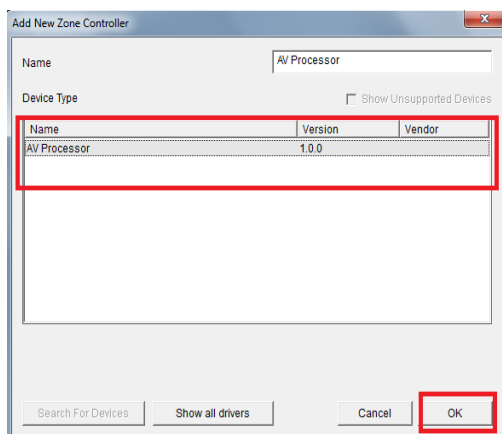


Select the driver file from the list --> Click OK

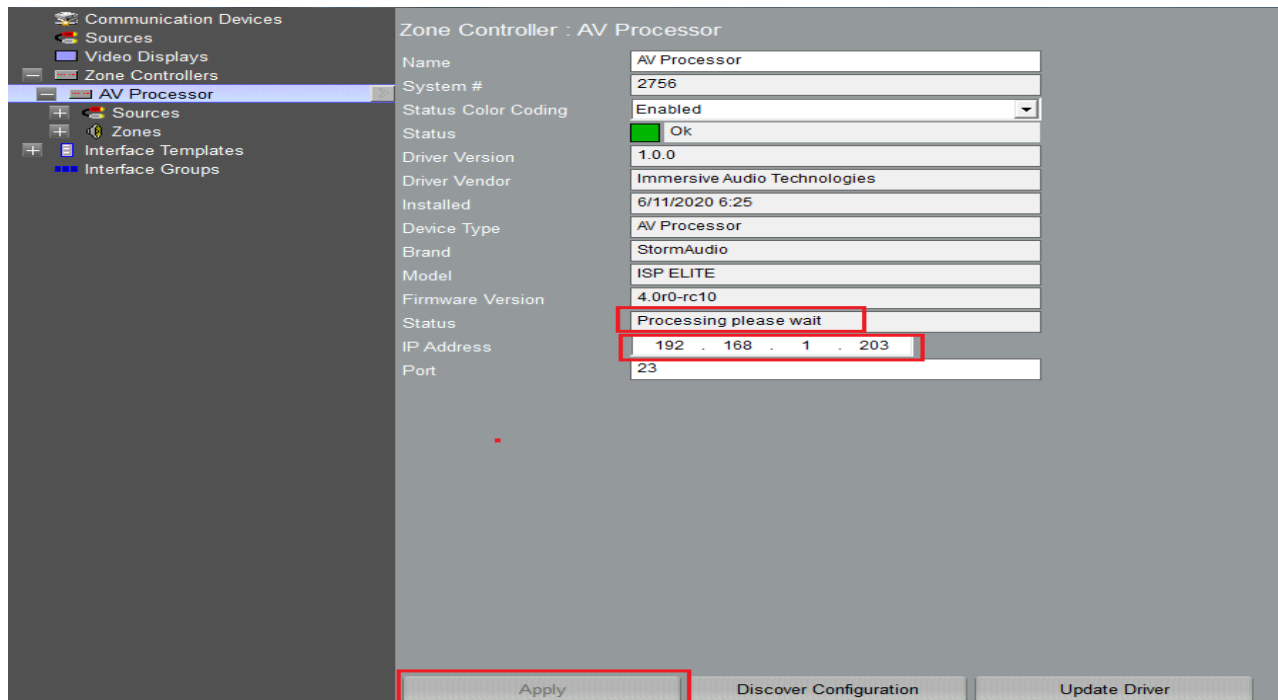

Name	AV Processor
System #	2756
Status Color Coding	Enabled
Status	Processing please wait
Driver Version	1.0.0
Driver Vendor	Immersive Audio Technologies
Installed	6/11/2020 6:25
Device Type	AV Processor
Brand	StormAudio
Model	ISP ELITE
Firmware Version	4.0r0-rc10
Status	Processing please wait
IP Address	192 . 168 . 1 . 203
Port	23

Buttons: Apply, Discover Configuration, Update Driver

Now enter the IP address of AV processor and click Apply -- > Do not press anything till Status "Processing please wait" change to "Ready".

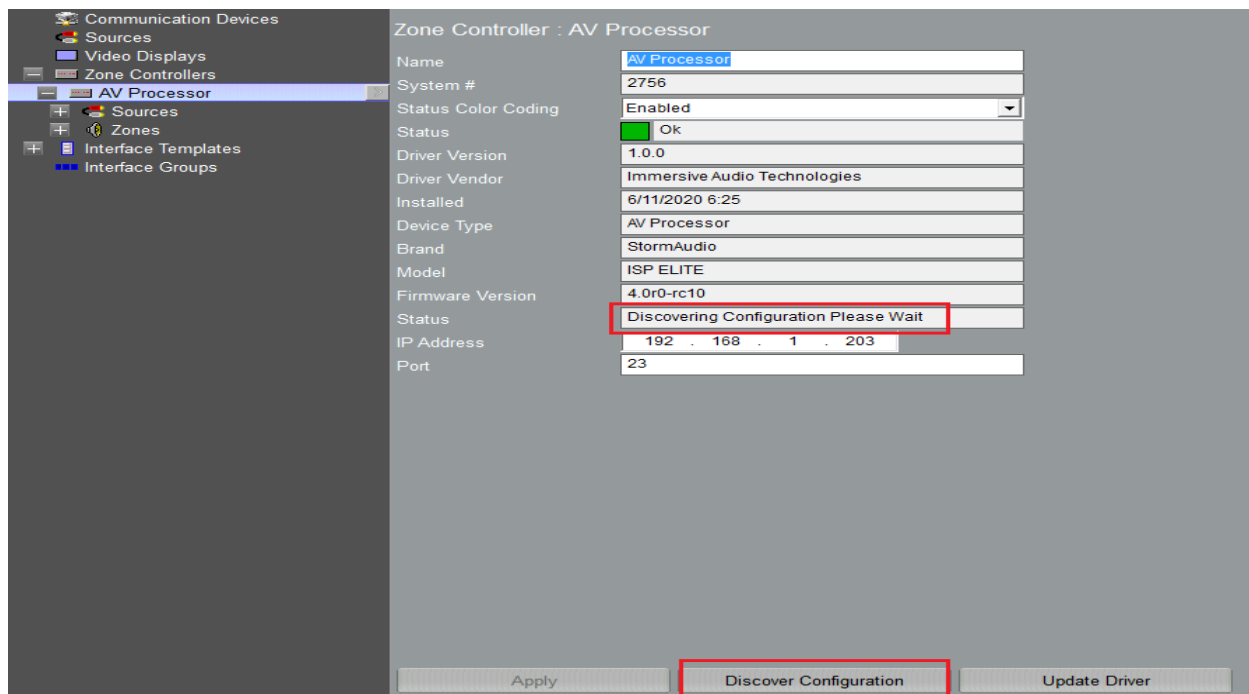

Name	AV Processor
System #	2756
Status Color Coding	Enabled
Status	Discovering Configuration Please Wait
Driver Version	1.0.0
Driver Vendor	Immersive Audio Technologies
Installed	6/11/2020 6:25
Device Type	AV Processor
Brand	StormAudio
Model	ISP ELITE
Firmware Version	4.0r0-rc10
Status	Discovering Configuration Please Wait
IP Address	192 . 168 . 1 . 203
Port	23

Buttons: Apply, Discover Configuration, Update Driver


After status shows "Ready" hit the Discover Configuration button -- > Again wait for status "Discovering Configuration please wait" change to "Ready".

All sources and zones will discover automatically.

2 Preset Configuration:

By default in ELAN 10 Preset button is configured, If you configure less than 10 preset in AV Processor delete the extra button from ELAN interface.


Rename the remaining preset button to preset name given in AV Processor.

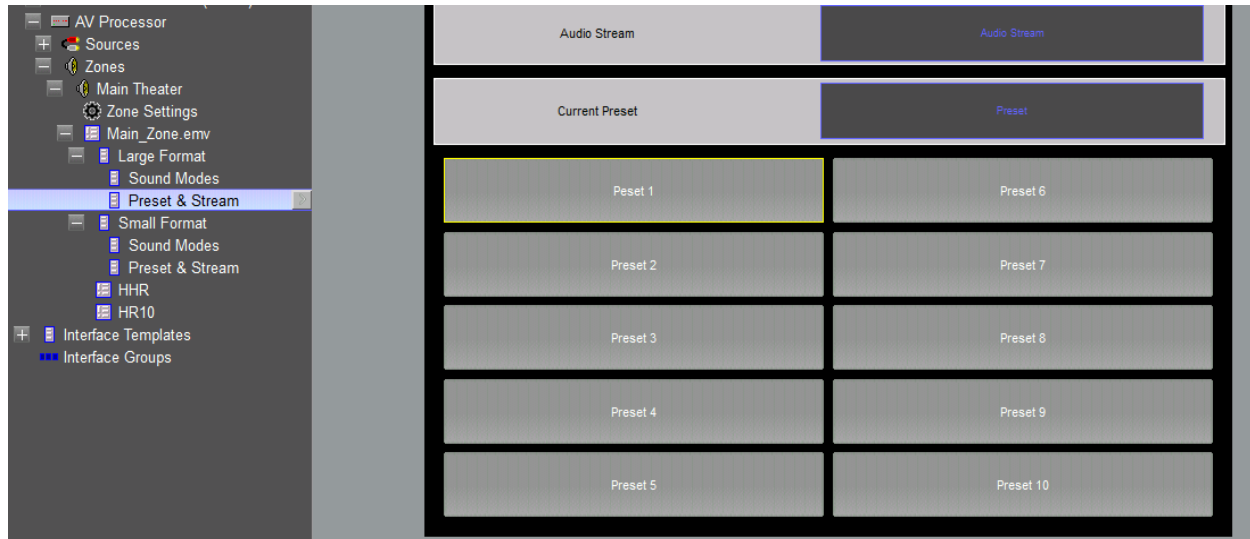

If you want to add preset button manually (in case you added new preset).

Right click on any preset button from interface -- > select copy control group -- > Right click on blank area -- > select Paste control group. -- > You will get new button here.


To add commands on button, click on button -- > it will open its property window -- > Give name to button (Preset Name) -- > select the preset no from drop down list in universal function -- > select AV Processor in connect to. Shown in below image.

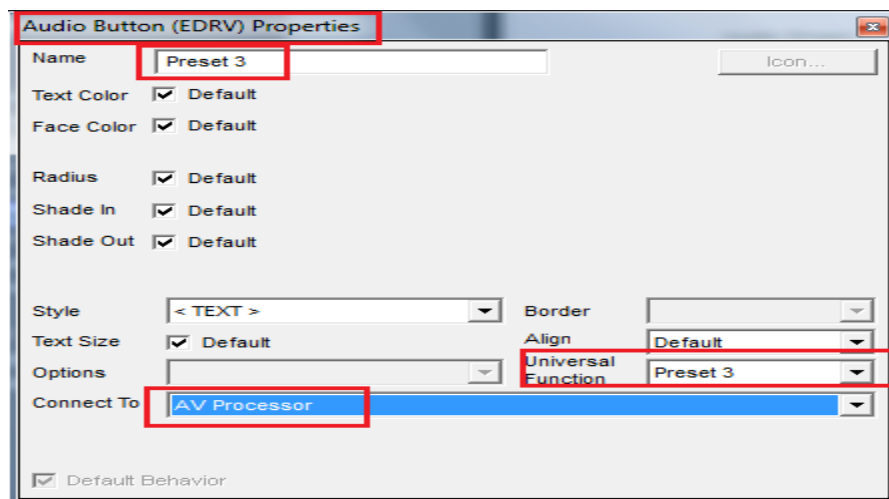

3 Zone Option Configuration:

To configure zone option (Bass, Treble, EQ, Zone2 Source On/Off, ShereAudio).

Right click on Zone -- > Click Create setting page for this zone -- > All option of this zone will appear in setting page.

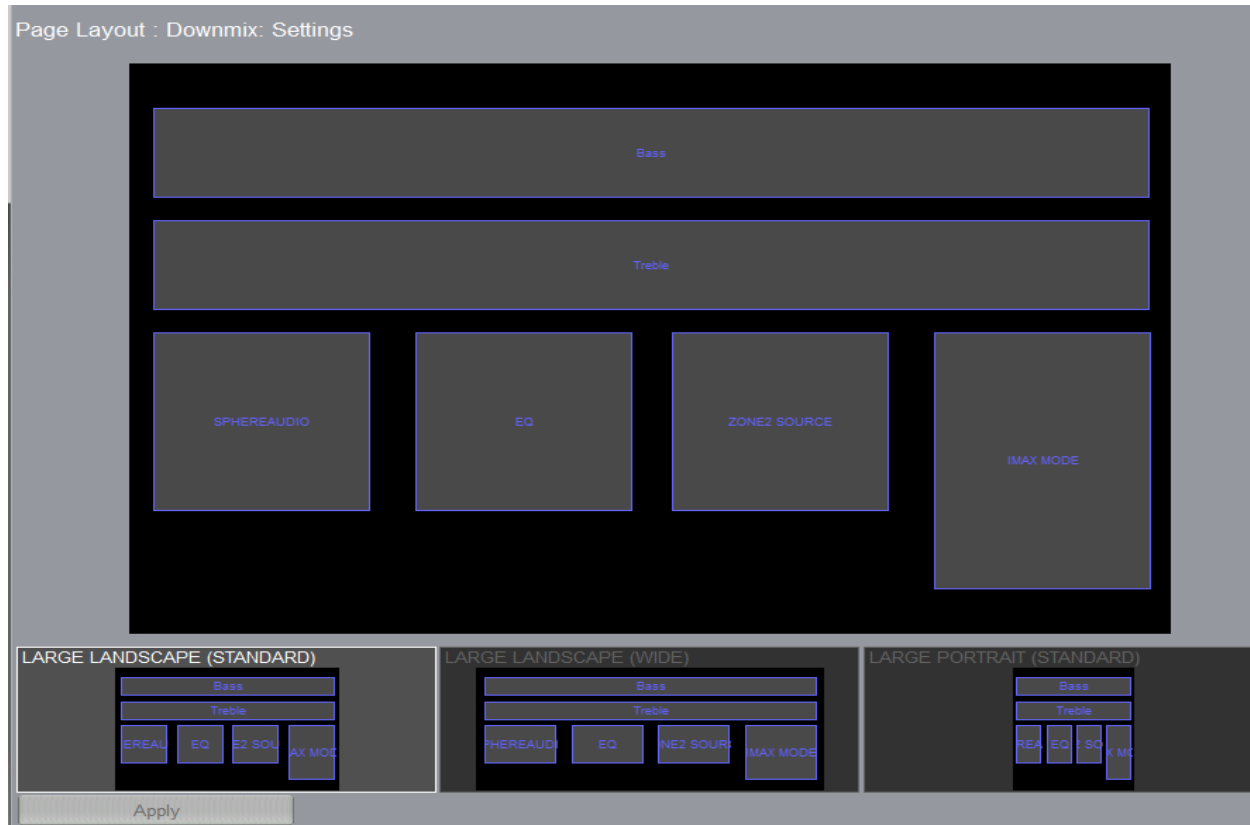

Delete the button you not wanted for this zone.

Delete IMAX Mode Button.


Zone2 Source button function

When same source as main theater select in zone2, Zone2 Source button will automatically turn off.


When other source select in zone2, Zone2 Source button turn on automatically and switch to selected source

4 ELAN Interface

Go to Media tab you will get all zones here.

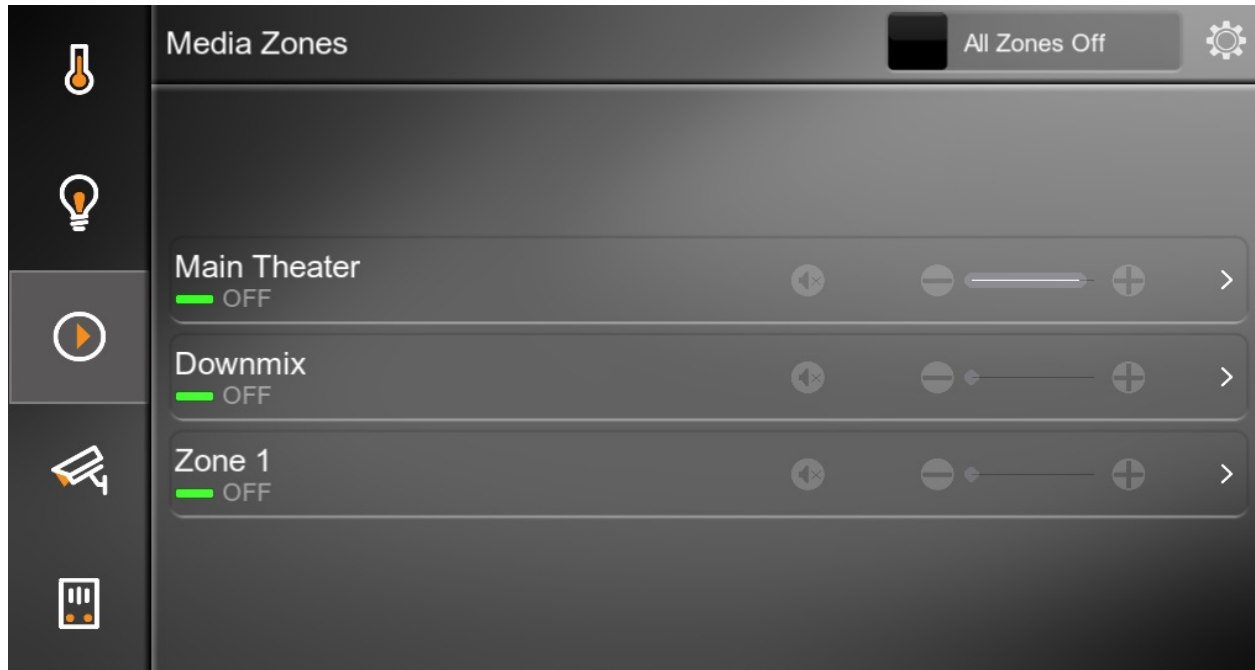

Select the zone you want to turn on.

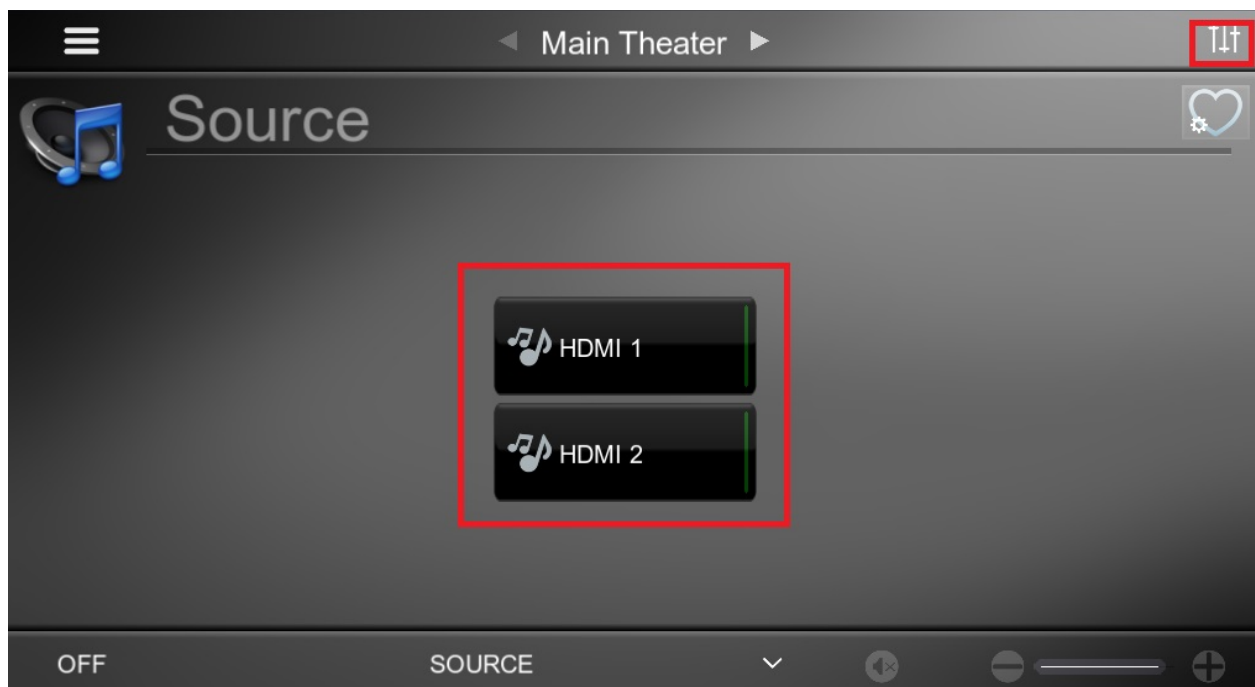


All zone options are available in zone's setting page, to open setting page click on left top corner icon.

In setting page of Main Theater you will get two pages 1. Sound Modes and 2. Preset & Stream.

1. Sound Modes Page

In Sound Modes page you will get IMAX Mode button, SphereAudio Effect Button, Surround Modes Button, BASS and Treble settings.

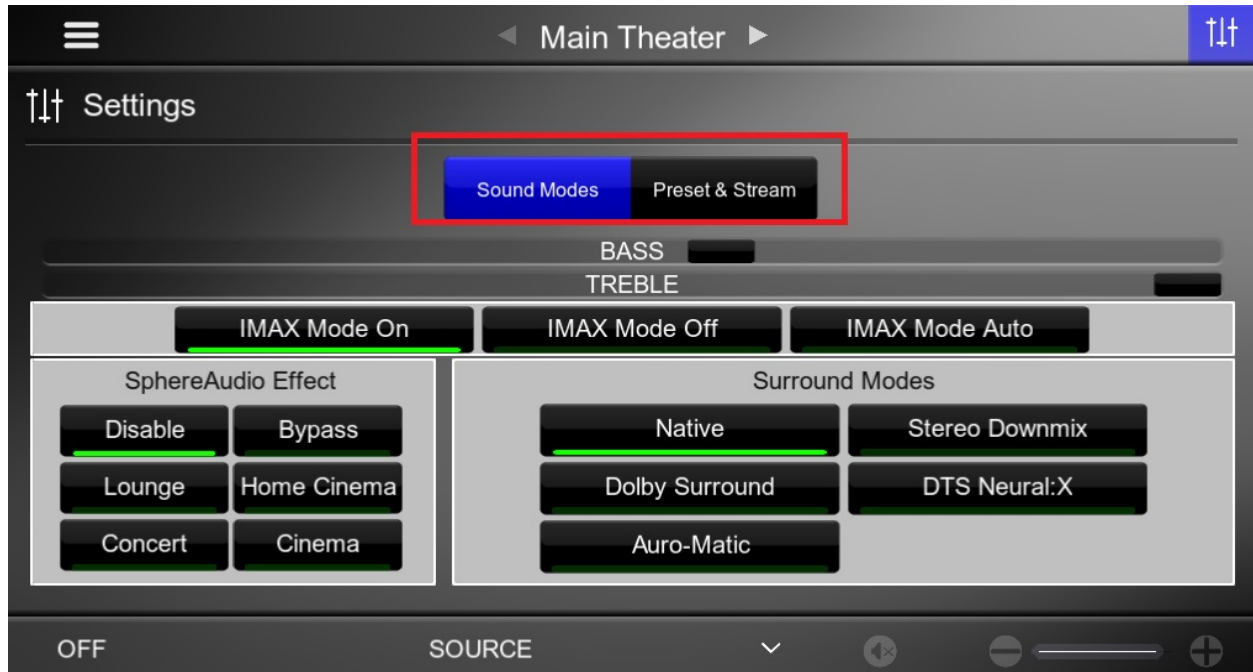


2. Preset & Stream Page

In Preset & Stream page you will get, Current Audio Stream, Current Preset running and Preset buttons to change preset.



In Zone2(Audio Zone) page you will get all the sources same as Main Theater.

Select the source you want to play in Zone2(Audio Zone). Same setting page is available in all audio zones. To open zone setting page click left top corner icon.

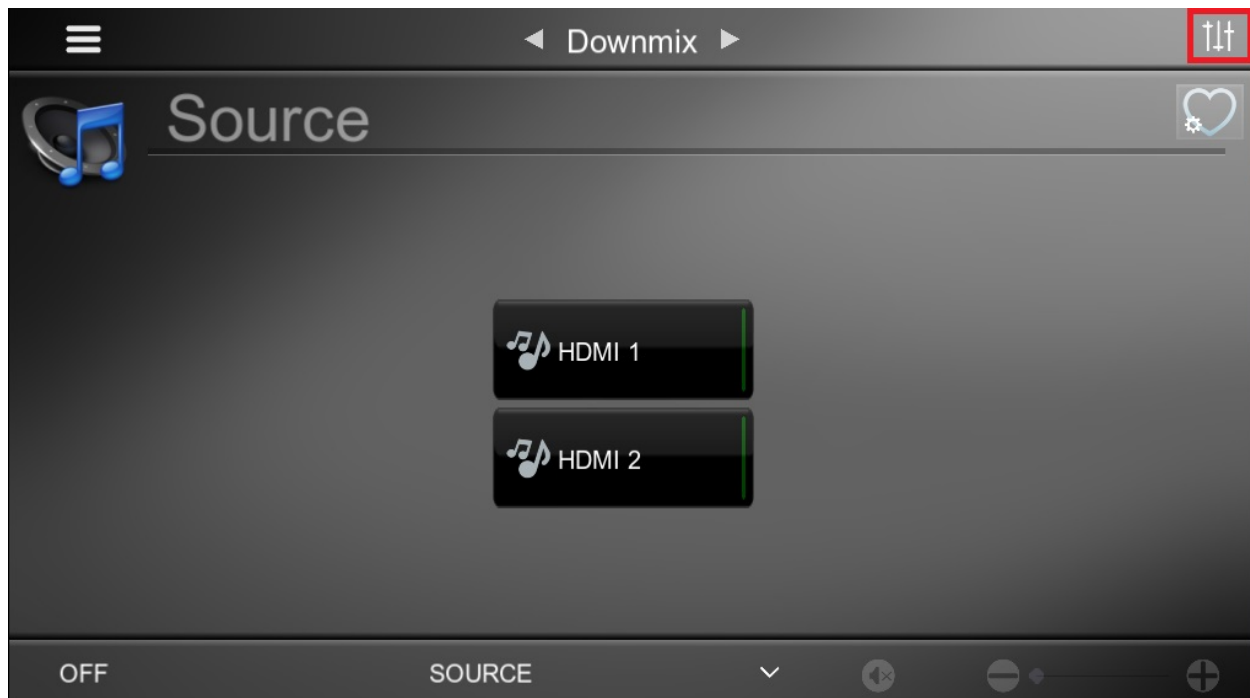

In zone2(Audio Zone) setting page you will get options BASS, TREBLE, SphereAudio On/Off, EQ On/Off, Zone2 Source On/Off(No need to touch this button this will automatically operate according to the source selection, Zone2 Source button function explained above).

